



HY-PAK Cardboard Baling Twine

Suggested Knot Use


Suggested knot to tie after you have threaded your bale with Hy-Pak Bale Twine. For this example the two ends of your tie have been colored **yellow** and **blue** for easier instruction.

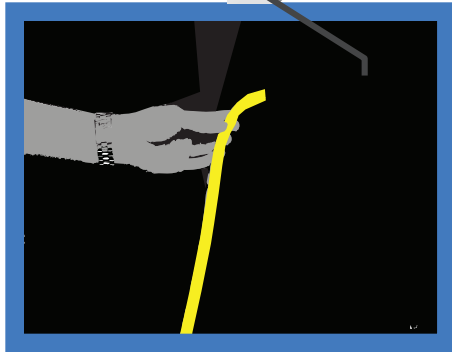


1 After you have threaded your bale, take the cut end in your hand.

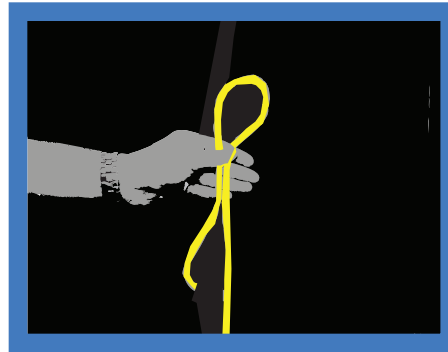


2 Make a loop.

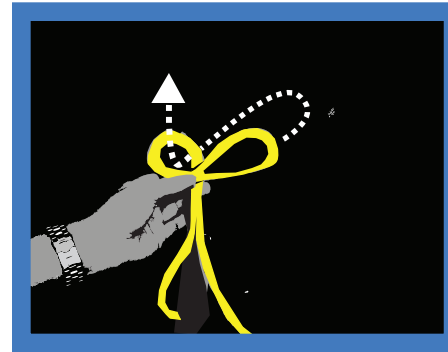


3 Cross the loop over and pull through the hole.

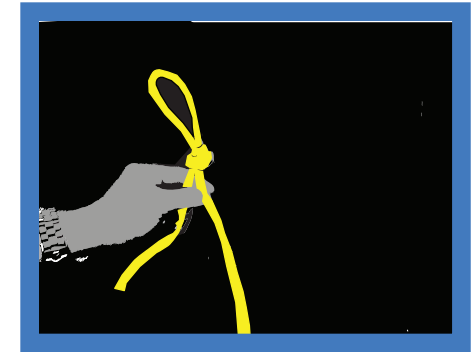


4 Now you have created a loop similar to that of a wire tie.

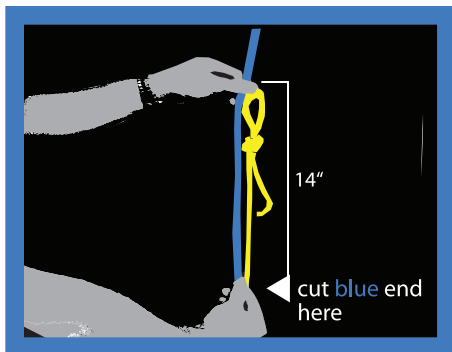


5 Pull the slack tight. Using the loop as a point of reference, take the other end and measure roughly 14 inches of twine so you can cut your tie and make a knot.

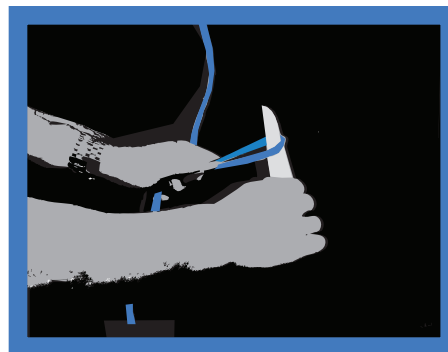

6 Cut the twine leaving the extra 14 inches for your knot. Any knife or scissors will suffice.

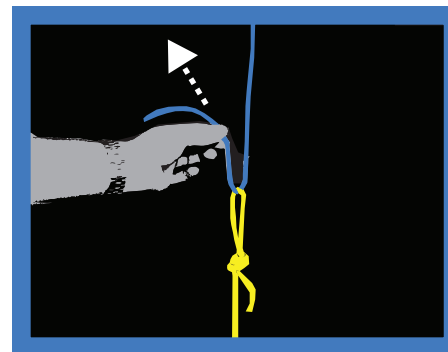

7 Slide the end through your loop and pull up. This tightens the slack around your bale.

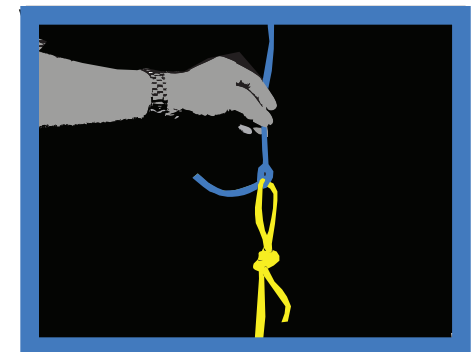

8 Tie any simple knot. Repeat process for the rest of your ties. Congratulations. You have made a strong, safe and friendly cardboard bale with Hy-Pak Bale Twine.

Remember

Keep all bale ties at equal tension. Do not have some tight and some loose.